

HowTO

Clarke® EZ-8 Drum Sander Operation and Safety

Safety Practices:

Sanding dust is flammable!
Empty and clean dust bag
when not in use.

Always wear safety
goggles, protective
clothing, and a dust mask
while sanding.

Keep the dust bag
emptied. Dust generated
from sanding wood floors
can spontaneously ignite
or explode. Promptly
dispose of any sanding
dust in a metal container
clear of any combustibles.
Do not dispose in a fire.

Keep the work area well
ventilated.

Sanding/finishing wood
floors can create an
explosive or combustible
environment. Do not
operate this machine
around solvents, thinners,
fuels, floor finishes, or any
other flammable materials.

Keep hands, feet, and
loose clothing away from
all moving parts on the
machine.

Disconnect the power cord
before replacing the pad or
the abrasive.

Never leave the machine
unattended while it is
connected to a power
source.

www.clarkeus.com/rental

Application: Sand hardwood floors. Level uneven wood floors.

Set-up and operation

Follow the steps listed below to complete a floor sanding project safely.

Step	Action												
1	Preparation:												
	<table border="1"><thead><tr><th>Step</th><th>Action</th></tr></thead><tbody><tr><td>1</td><td>Install handle and fasten latches.</td></tr><tr><td>2</td><td>Insert control link into notch and slide collar to pin. Raise sanding drum with control level.</td></tr><tr><td>3</td><td>Install dust tube. Tie dust bag over bell opening of dust tube.</td></tr><tr><td>4</td><td>Connect the handle pigtail to the motor cord.</td></tr><tr><td>5</td><td>Install abrasive (expandable drum, continuous sleeve sandpaper OR standard drum flat notched sandpaper).</td></tr></tbody></table>	Step	Action	1	Install handle and fasten latches.	2	Insert control link into notch and slide collar to pin. Raise sanding drum with control level.	3	Install dust tube. Tie dust bag over bell opening of dust tube.	4	Connect the handle pigtail to the motor cord.	5	Install abrasive (expandable drum, continuous sleeve sandpaper OR standard drum flat notched sandpaper).
	Step	Action											
	1	Install handle and fasten latches.											
	2	Insert control link into notch and slide collar to pin. Raise sanding drum with control level.											
	3	Install dust tube. Tie dust bag over bell opening of dust tube.											
4	Connect the handle pigtail to the motor cord.												
5	Install abrasive (expandable drum, continuous sleeve sandpaper OR standard drum flat notched sandpaper).												
2	Operational Instructions:												
	<table border="1"><thead><tr><th>Step</th><th>Action</th></tr></thead><tbody><tr><td>1</td><td>Set exposed nails with hammer and punch. Connect machine to grounded outlet. Press switch to start.</td></tr><tr><td>2</td><td>Allow switch to return to run (R) position.</td></tr><tr><td>3</td><td>PREVENT DAMAGE TO THE SURFACE; MACHINE IS ALWAYS MOVING WHEN DRUM CONTACTS FLOOR.</td></tr><tr><td>4</td><td>Slowly lower drum to floor with control handle. Do not force handle down to floor. Allow to float on floor.</td></tr></tbody></table>	Step	Action	1	Set exposed nails with hammer and punch. Connect machine to grounded outlet. Press switch to start.	2	Allow switch to return to run (R) position.	3	PREVENT DAMAGE TO THE SURFACE; MACHINE IS ALWAYS MOVING WHEN DRUM CONTACTS FLOOR.	4	Slowly lower drum to floor with control handle. Do not force handle down to floor. Allow to float on floor.		
	Step	Action											
	1	Set exposed nails with hammer and punch. Connect machine to grounded outlet. Press switch to start.											
	2	Allow switch to return to run (R) position.											
3	PREVENT DAMAGE TO THE SURFACE; MACHINE IS ALWAYS MOVING WHEN DRUM CONTACTS FLOOR.												
4	Slowly lower drum to floor with control handle. Do not force handle down to floor. Allow to float on floor.												
3	Operational Techniques: Work from right to left. For each forward pass, move the machine 4" over the pass just finished. Retrace the reverse path without overlapping. Keep sander in motion while drum is engaged. Move the machine in the direction of the wood grain. Sand at a constant pace. Feather-cut termination point of pass by easing control lever up. Stagger termination points.												

More on reverse . . .

EZ-8 Drum Sander

Questions or Problems?

Contact Clarke
Technical Service at
800-356-7274.

Need more information?

The instructions on this sheet are abbreviated instructions only and are provided solely as a customer service. They are not meant to replace the tool's operation manual. If you are unsure of the tool's safe and proper operation, please request an operator's manual from one of our sales associates.

Step	Action														
4	Safety Tips: READ AND FOLLOW DIRECTIONS IN OWNERS MANUAL														
	<table border="1"> <thead> <tr> <th>Step</th> <th>Action</th> </tr> </thead> <tbody> <tr> <td>1</td> <td>Press selector switch to off (O) position and disconnect power supply when changing abrasive.</td> </tr> <tr> <td>2</td> <td>Empty dust bag when it is 1/3 full. Sanding dust can spontaneously ignite and cause fire or explosion.</td> </tr> <tr> <td>3</td> <td>Inspect power cable for abrasion and replace when needed.</td> </tr> </tbody> </table>	Step	Action	1	Press selector switch to off (O) position and disconnect power supply when changing abrasive.	2	Empty dust bag when it is 1/3 full. Sanding dust can spontaneously ignite and cause fire or explosion.	3	Inspect power cable for abrasion and replace when needed.						
	Step	Action													
	1	Press selector switch to off (O) position and disconnect power supply when changing abrasive.													
2	Empty dust bag when it is 1/3 full. Sanding dust can spontaneously ignite and cause fire or explosion.														
3	Inspect power cable for abrasion and replace when needed.														
Care and Maintenance:															
5	<table border="1"> <thead> <tr> <th>Step</th> <th>Action</th> </tr> </thead> <tbody> <tr> <td>1</td> <td>Periodically blow out dust from sanding chamber.</td> </tr> <tr> <td>2</td> <td>Periodically remove debris from truck and caster wheels.</td> </tr> <tr> <td>3</td> <td>Remove dust bag from machine and shake thoroughly to remove sanding dust.</td> </tr> <tr> <td>4</td> <td>Turn bag inside out and machine wash in cold water to maintain dust recovery.</td> </tr> <tr> <td>5</td> <td>Periodically check drive belts for fraying and broken cogs. Realign affected belt.</td> </tr> <tr> <td>6</td> <td>Periodically check bearings for wear and lubricate according to the owners manual.</td> </tr> </tbody> </table>	Step	Action	1	Periodically blow out dust from sanding chamber.	2	Periodically remove debris from truck and caster wheels.	3	Remove dust bag from machine and shake thoroughly to remove sanding dust.	4	Turn bag inside out and machine wash in cold water to maintain dust recovery.	5	Periodically check drive belts for fraying and broken cogs. Realign affected belt.	6	Periodically check bearings for wear and lubricate according to the owners manual.
	Step	Action													
	1	Periodically blow out dust from sanding chamber.													
	2	Periodically remove debris from truck and caster wheels.													
	3	Remove dust bag from machine and shake thoroughly to remove sanding dust.													
	4	Turn bag inside out and machine wash in cold water to maintain dust recovery.													
5	Periodically check drive belts for fraying and broken cogs. Realign affected belt.														
6	Periodically check bearings for wear and lubricate according to the owners manual.														