

HowTO

Clarke® Super 7R Edger Operation and Safety

Safety Practices:

Sanding dust is flammable!
Empty and clean dust bag
when not in use.

Always wear safety
goggles, protective
clothing, and a dust mask
while sanding.

Keep the work area well
ventilated.

Sanding/finishing wood
floors can create an
explosive or combustible
environment. Do not
operate this machine
around solvents, thinners,
fuels, floor finishes, or any
other flammable materials.

Keep hands, feet, and
loose clothing away from
all moving parts on the
machine.

Disconnect the power cord
before replacing the pad or
the abrasive.

Never leave the machine
unattended while it is
connected to a power
source.

www.clarkeus.com/rental

Application: Sanding wood floors along edges where a drum sander cannot reach.

Install the Sandpaper Disc

Step	Action
1	Unplug the machine and turn it upside down.
2	Using the wrench accessory, remove the screw and washer from the center of the sanding pad.
3	Remove the center from a sandpaper disc.
4	Install the screw and washer in the center of the disc. Make sure the head of the screw is on the abrasive side of the disc.
5	Install the sandpaper disc on the sanding pad.
6	Tighten the screw until it is secure. Do not over-torque.

Sanding a Wood Floor

Follow the steps in the table below to sand the edges of a wood floor.

Step	Action
1	Move the machine to the work location and tilt the machine back so that the sandpaper does not touch the floor. Make sure the ON/OFF switch is in the OFF position.
2	Connect the electrical plug to a 3-prong outlet.

More on reverse . . .

Super 7R Edger

Questions or Problems?

Contact Clarke
Technical Service at
800-356-7274.

Need more information?

The instructions on this sheet are abbreviated instructions only and are provided solely as a customer service. They are not meant to replace the tool's operation manual. If you are unsure of the tool's safe and proper operation, please request an operator's manual from one of our sales associates.

Sanding a Wood Floor (continued)

Step	Action
3	Hold both handles and lift the edger.
4	Move the ON/OFF switch to the ON position.
5	Start moving the tool before you lower the disc to the floor.
6	Once the disc makes contact, move the machine side to side in front of you to sand the surface. Do not press down.
7	Sand with the grain as much as possible.
8	Empty the dust bag frequently (whenever it is 1/3 full) to prevent a fire hazard. Turn the machine off and unplug it.
9	When finished, turn the ON/OFF switch OFF, unplug the machine, and empty the dust bag.