

56109777 MAINFRAME KIT


Ultraspeed 1500 Models: 01530A, 01531A, 01491B

CONTENTS OF KIT

ITEM	PART NO.	QTY	DESCRIPTION
[]	56090103	1	Instruction Sheet
1	56381965	1	Mainframe Blue NDC
2#	56115368	2	Spring Tube
3	61849A	1	Pedal Release
4	56381963	4	Spacer
5	80297A	4	Screw 1/4-10 x 1.75 BH ZP SEMS

[] = Not Shown

= Revised or new since last update

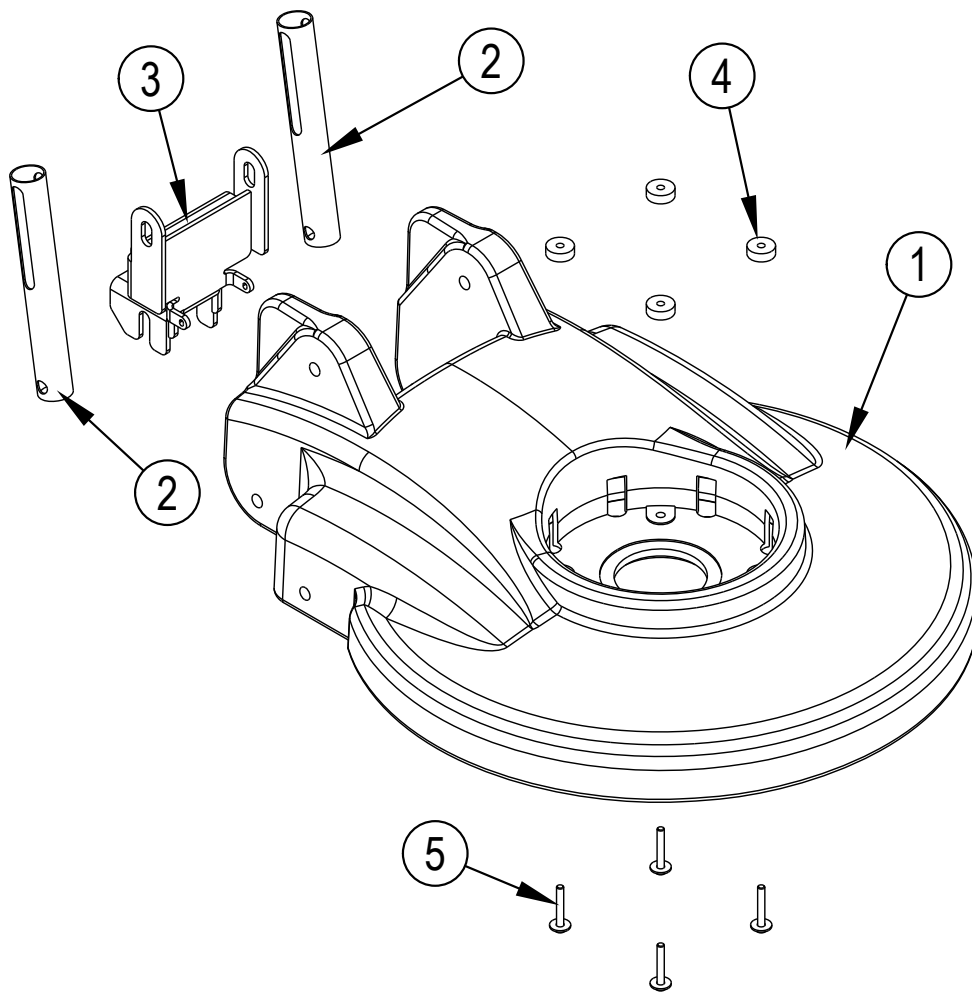

INSTALLATION INSTRUCTIONS


⚠ WARNING!

UNPLUG UNIT FROM OUTLET BEFORE SERVICING.

REMOVE HANDLE ASSEMBLY

- 1 See Figure 1. Disconnect the power cord (A) from the motor.
- 2 Remove the Screw (B) and Pivot Axle (C) to un-install the Handle Assembly and washers (D). Set all items aside to be reused.


FIGURE 1

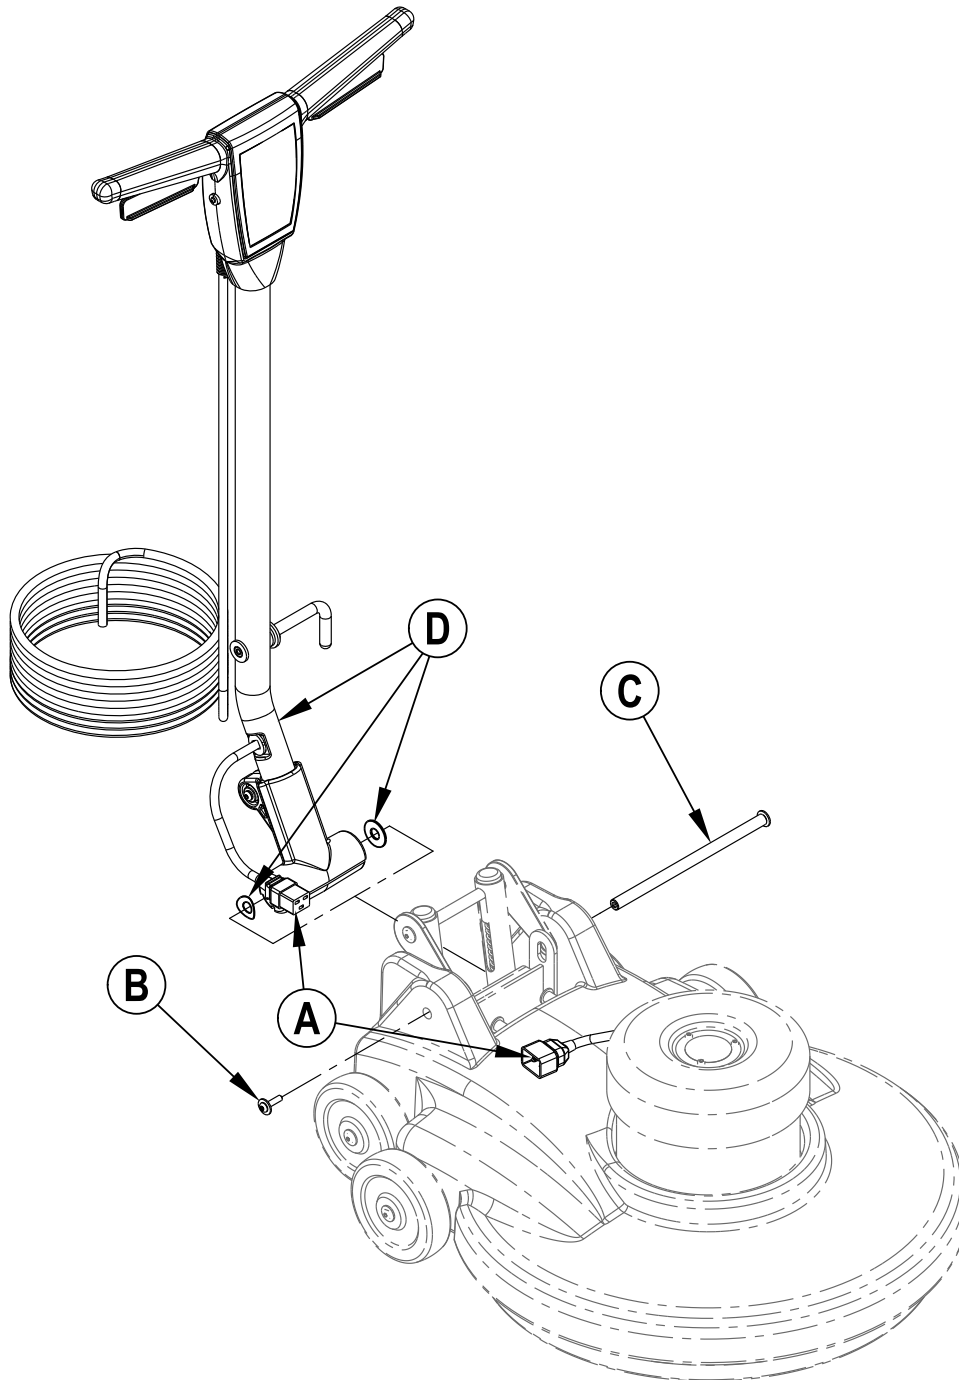

REMOVE COMPRESSION SPRINGS AND WHEELS

- 3 See Figure 2. Remove the Screw (F). Keep downward pressure on the top of the spring guides (E) to relieve tension and slowly remove the Load Spring Pin and Screw (G) from the machine and set aside to be reused.
- 4 Remove the Screw (H) and slowly remove the Rear Axle and Screw (J) from the machine.
- 5 Remove the wheels, washers and all the loose components (K) from the machine.
- 6 Remove the Screw (L) and Front Axle and screw (M) from both sides of the machine and retain the wheels, washers, and axle components as shown to be set aside and reused.

FIGURE 2

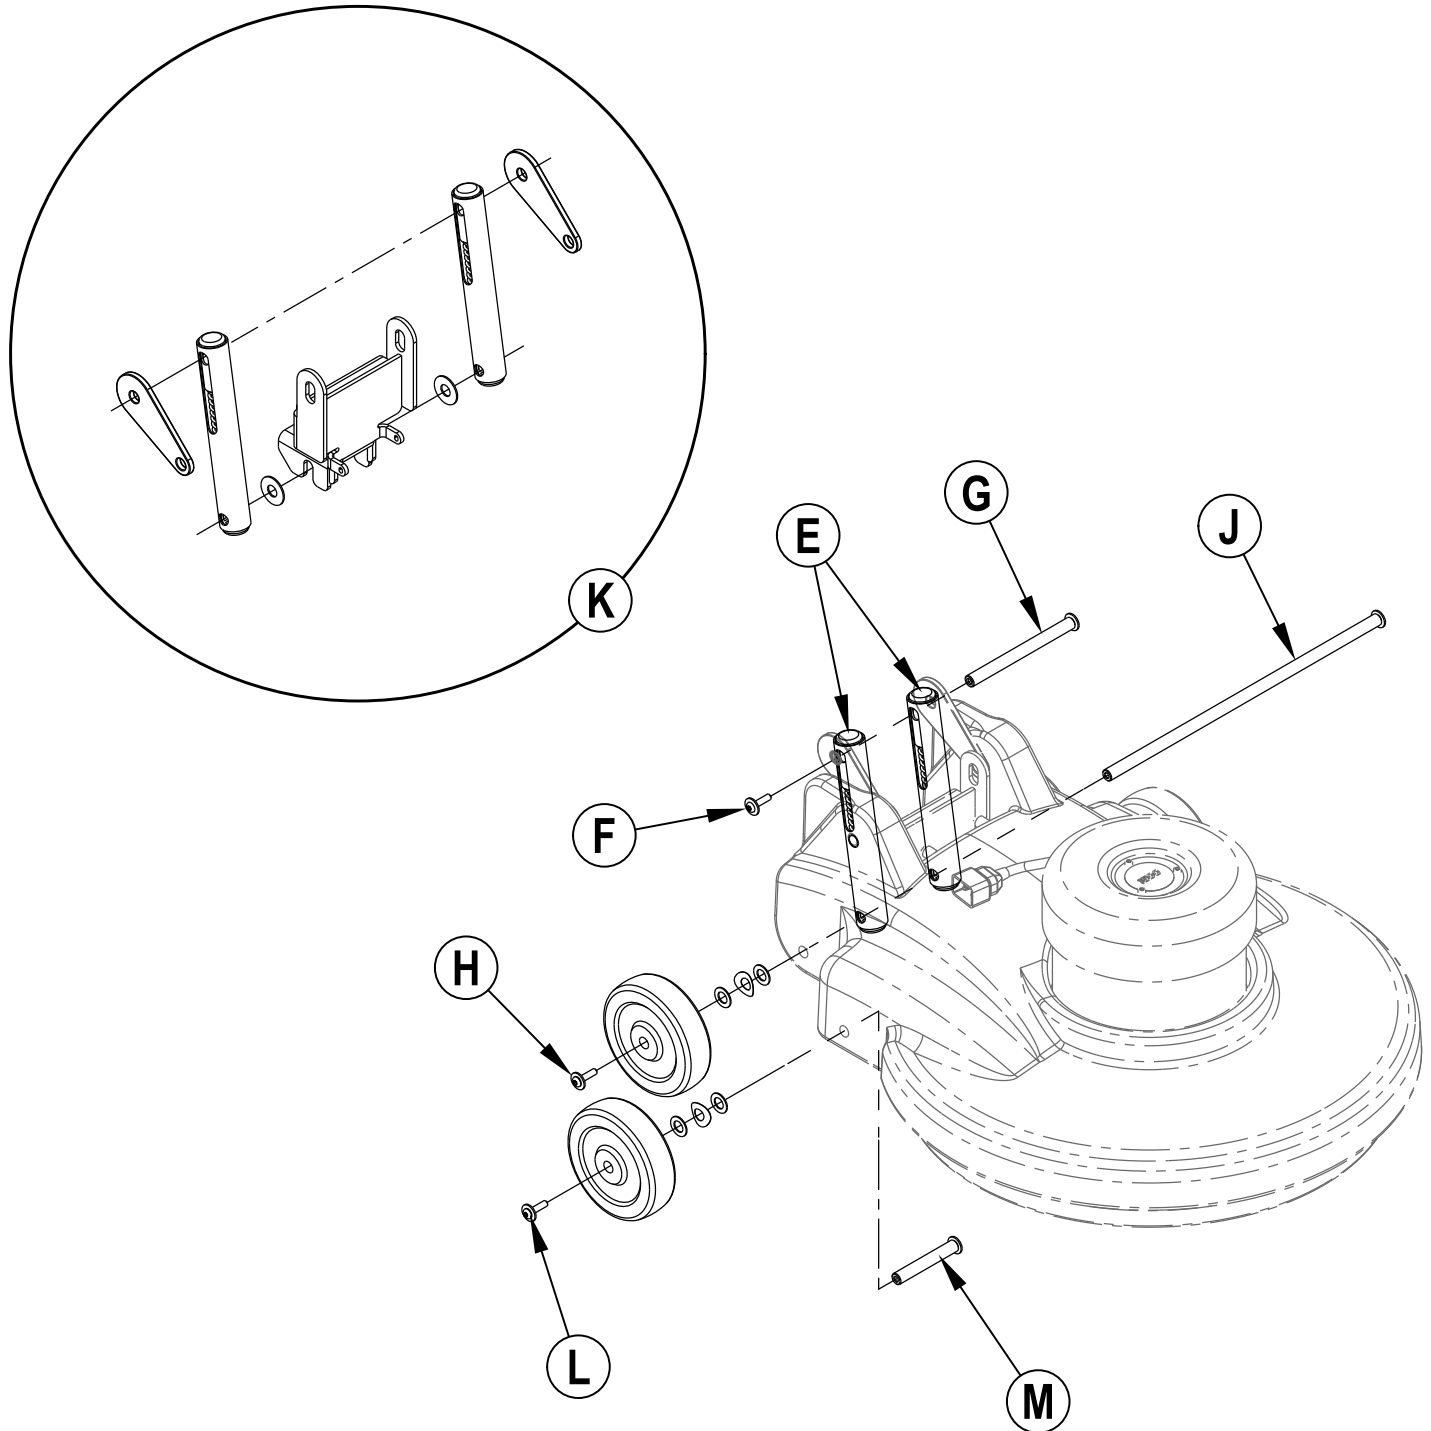

DISASSEMBLE MAINFRAME MACHINE COMPONENTS

- 7 See Figure 3. Remove the rest of the components mounted to the existing Mainframe (N) as shown and discard existing mainframe. Set aside all existing components to be reused except the motor mounting screws (O).

FIGURE 3

